



### MOUNTING:

mounted, singly or in continuous rows. For continuous row mounting, end caps are eliminated and replaced with a joiner band to prevent light leakage between the two diffuser ends. Specify row lengths. End caps are used at the ends of rows and on individual units.